

ADISRA® SmartView

How to Migrate SoftKey License to HardKey License

Document Information

Software Version:	4.0.3.5
Creation Date:	August, 2022
Last Edit Date:	18, August, 2022
Version:	1.0



1. Purpose of this article

This article aims to show you how to migrate a SoftKey license to a Hardkey license.

2. How to migrate a SoftKey license to a Hardkey license

- 1. Connect the dongle to the computer's USB port;
- 2. Open ADISRA SmartView and in the top menu, click on the "License" tab.



3. Then click the "Register" button.





4. In the "License Type" field, select the "SoftKey" option and then click on the "Advanced" button.


ADISRA SmartView Ve			
Softkey D Hard key			
License Information			
Activate			
Tags: 4000 Clients: 2 T	ype: RT Serial Number: 404-00	000	
Hardware ID			
Output path: C:\Users\supe	ervision\Desktop\license.code	Gener	ate license.cod
After generating the licen	se.code send it to ADISRA		
License			
License path:			Validate
		2	Advanced
		_	
			OK

5. Deactivate the "SoftKey" Type License by clicking the "Deactivate License" button.


License Register	2
ADISRA SmartView Version: 4 0 3 3	
Advanced	2
Dearthinte Linner	
	Deactivate License
c:/osers/rilippo/Desktop/AdisrasmartviewDeactivateLicenseCode.code	Deactivate License
	Close
	u valigate
	Advanced
	01
	OK
5. X	
	License Register ADISRA SmartView Version: 4.0.3.3 License Type Softkey Hard key Advanced Deactivate License Be careful, ADISRA SmartView cannot run with deactivated license C:\Users\Filippo\Desktop\AdisraSmartViewDeactivateLicenseCode.code License path:




6. Confirm deactivation. Once this is done, a file will be generated in the path chosen in the previous window.

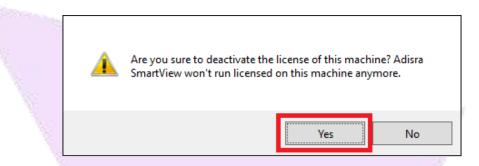

7. The file named "AdisraSmartViewDeactivateLicensecode.code" will be generated containing the deactivation code. Keep this file saved, as we will talk about it in the following steps.

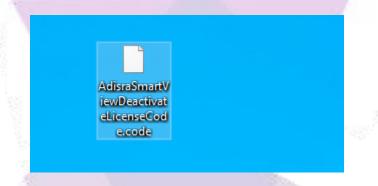

8. After generating the SoftKey license deactivation file, we will generate a file with the HardKey license activation code. Therefore, still in the "License Register" window, select the "HardKey" option and then click on the "Generate License.code" button. A file will be generated on the desktop.

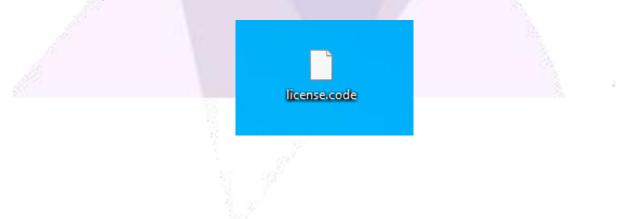




9. Send an email to "info@adisra.com" attaching the Softkey license deactivation files (AdisraSmartViewDeactivateLicensecode.code) and the Hardkey activation file (License.code). In the body of the email, inform the current version of ADISRA SmartView and the Serial Number of the license, which can be found on the certificate of authenticity.



- 10. Once this is done, the ADISRA team will deactivate the SoftKey license and activate the HardKey license. A file called "License.Lic" will be sent to your email, in which you have the HardKey activation code.
- 11. Now with the "License.Lic" file in your possession, open ADISRA SmartView again. A window will inform you that the current license is not valid as the software is not licensed. Click "Yes" to continue.

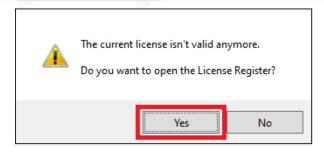



12. In the "License Type" field, select the HardKey option. Then click on the "..." button and point to the "License.Lic" file. After clicking the "Validate" button, your license is ready to use. You have successfully validated your HardKey.

	✗ License Register ×	
	ADISRA SmartView Version: 4.0.3.3	
10	○ Softkey Hard key	
	License Information	
	Hardware ID	
	Output path: C:\Users\Filippo\Desktop\license.code Generate license.code After generating the license.code send it to ADISRA Generate license.code	
	License path: Validate	
l		

