



ADISRA® SmartView

How to Run the LowCode Application

Document Information

Software Version:	4.0.3.5
Creation Date:	August, 2022
Last Edit Date:	18, August, 2022
Version:	1.0

1. Purpose of this article

This article aims to show you how to run the Low Code application.


2. How to Run the Low Code Application

1. After installing ADISRA SmartView, download the LowCode application from the link below and unzip it on your desktop.


Link:

https://drive.google.com/file/d/16xgPYUAIp9sFguytyYgz9RU9uq7_Zpix/view?usp=sharing

2. Open the "ADISRA Lowcode" folder and run the "ADISRA_LowCode" file.

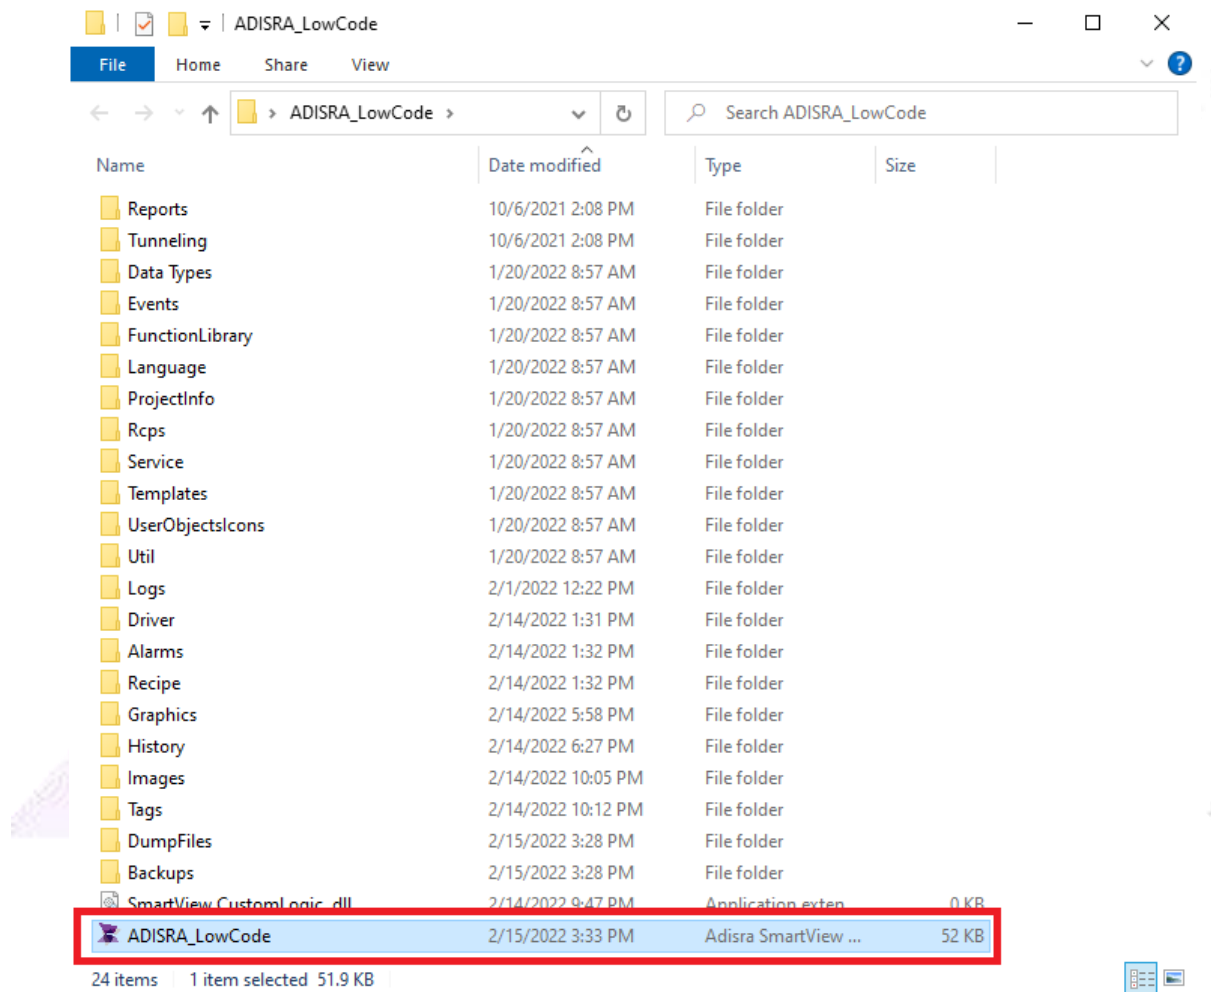


3. Then click the button  to run the application.

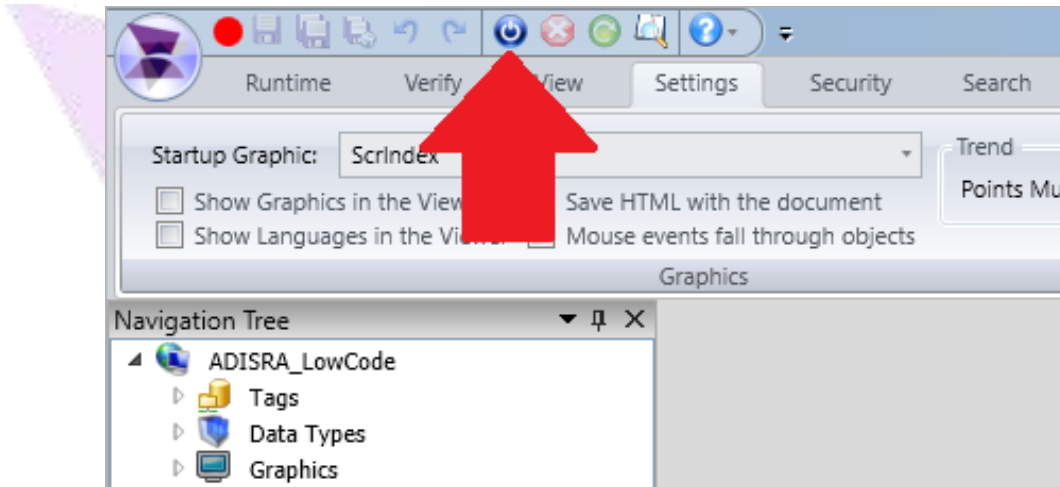

4. After running the application, change the "guest" user to the "administrator" user to have full access to the application.

Login: Administrator **Password:** admin

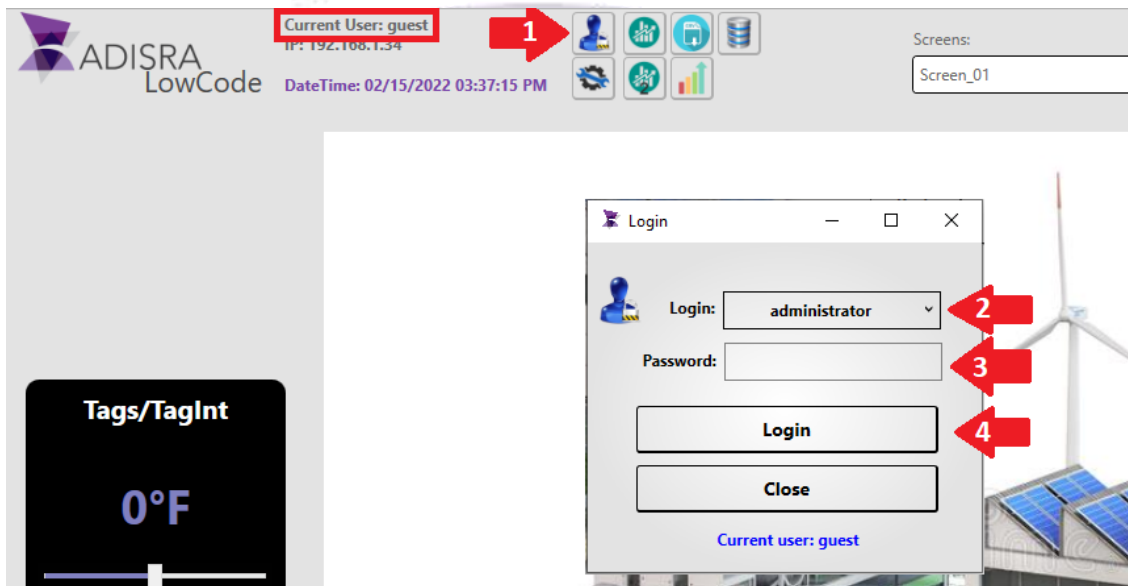

Note: If you want to access other users, follow the passwords below.

Login: guest **Password:** <blank>

login: operator **Password:** operator

If you need any assistance, please contact us at support@adisra.com or 833-523-4772.

